

4DP4L0EFA

Installation instructions for 4 button remote control kit with 4 double pull functions .

All functions momentary (hold the button down to activate release the button to deactivate)

Remote Function- **SEE Figure 1 yellow wire is activated with S1 , White wire is activated with S2 , Green wire is activated with S3 Blue wire is activated with S4 . Red wire is DC power supply, Black wire is ground. Grey wire is the double pull wire. This wire is activated when you hold down any button along with the wire that the button also activates.**

We have programmed the keychain remote to your base unit for you. If you need to reprogram see page 3

No more than 14 amps total at any given time can run through the receiver. We recommend the use of 10 amp diodes on the control wires to prevent any power feedback into the receiver. For higher amp uses you must use relays... with the unit.

IT IS HIGHLY RECOMMENDED THAT YOU RUN A SWITCH BETWEEN THE POWER SOURCE AND THE RED WIRE ON THE RECIEVER AS A SAFETY.

Tools you will need:

12vdc test light

wire connectors (varies depending on application) and or scotch locks. **NOTE: use dielectric grease on all splice connections to prevent corrosion.**

Wire stripper / crimper

This kit contains the following:

1- 4 button keychain remote

1- wireless base unit box with pigtails (and optional external antenna if ordered)


1- external antenna


FOLLOW THESE STEPS CAREFULLY. DC POWER ONLY

Mount unit (base unit with wiring pigtails) near equipment motor.

1. Run a 14 gauge wire from a 12vdc battery or keyed ignition power to red terminal
2. Connect the black wire from the base unit to the battery ground or a good ground.
3. Connect the wires as described on top of page.
4. Test toggle switch and remote functions. Your control is now ready for use.
5. **MAKE SURE YOU HAVE SECURE AND CLEAN CONNECTIONS EVERYWHERE**

FIGURE 1

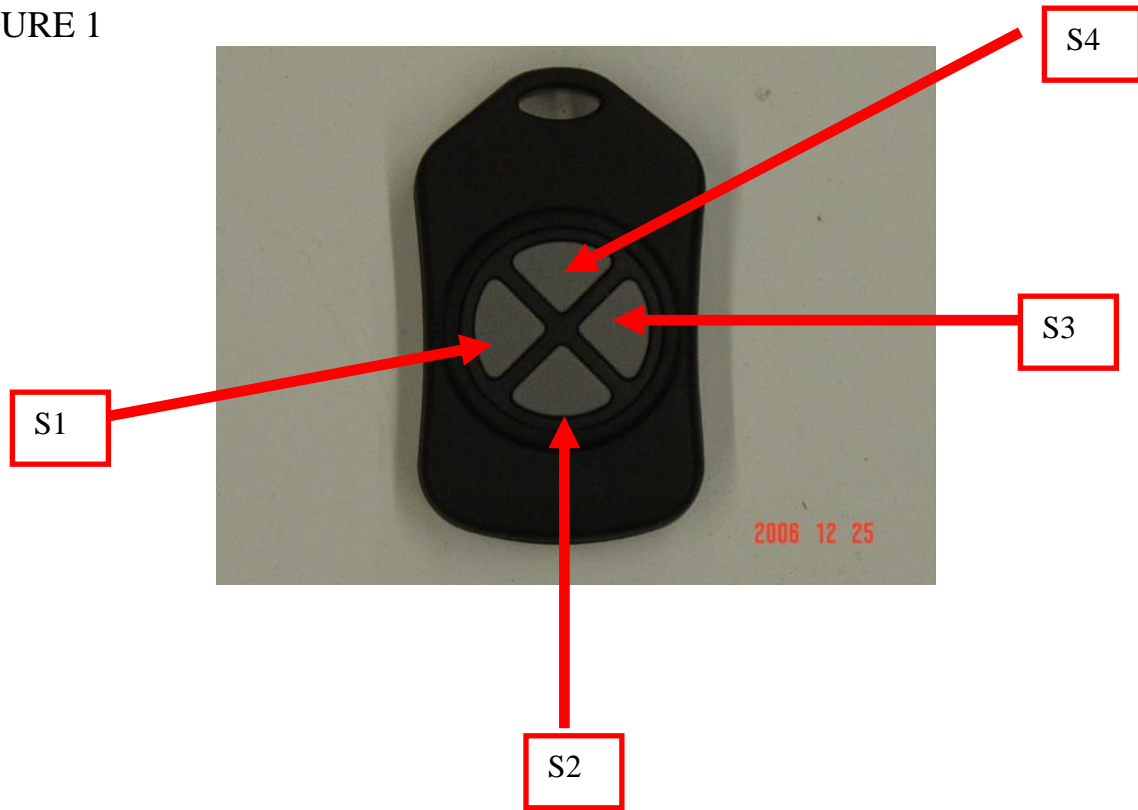

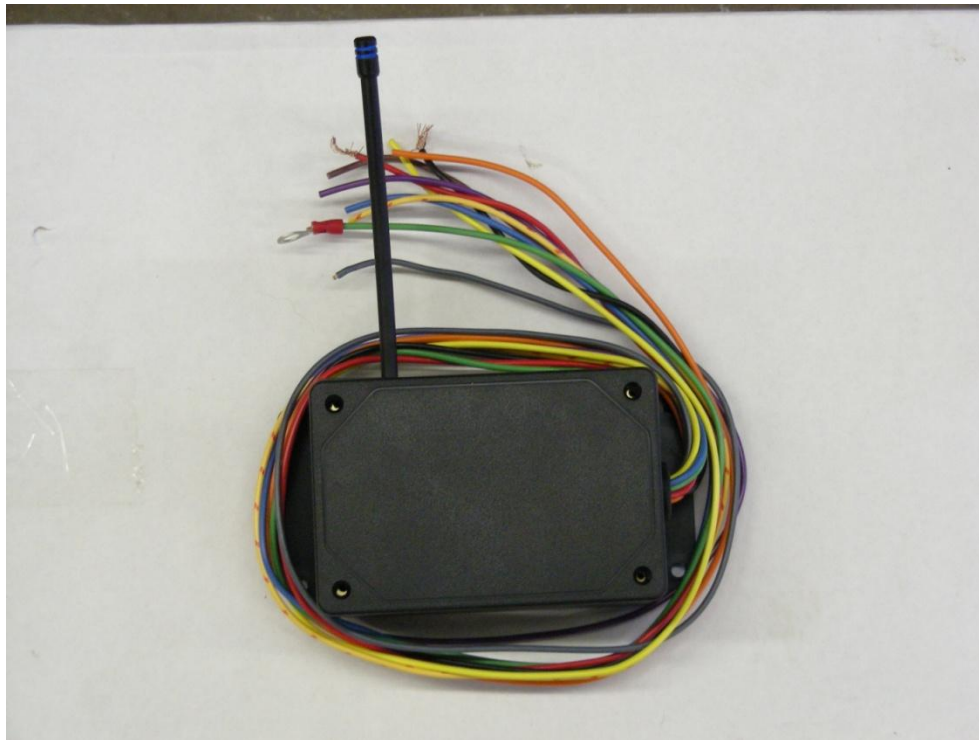

SETUP KEYCHAIN REMOTE TO BASE UNIT ADDRESS

Your keychain remote was setup to your receiver at the factory. If you need to reprogram your existing remote or are adding or replacing one follow the instructions below.

Please follow these steps:

1. Power up the base unit and remove the cover of the base unit with a small Phillips screw driver.
2. On the back side of the keychain remote depress the ADD button with a paperclip and RELEASE (If working properly a blue light in the window will blink).
3. Flip the keychain remote over and push each button individually to send address to the base unit.
THEN WAIT UNTIL THE BLUE LIGHT STOPS BLINKING AND PROCEED.
4. Go to the base unit and push the black button. The red LED will begin to flash.
5. Again push each button on the keychain remote to save the unique address (1 in 16 million)
6. Push black button on the base unit to end the programming mode and the red LED will stop flashing.
YOUR UNIT IS NOW READY TO USE.

BATTERY REPLACEMENT

The Keychain remote uses a standard CR2032 Lithium button cell battery. In normal use it will provide 1-2 years of operation. To replace the battery , gently pry apart the 2 halves of the remote.

Remove the battery by sliding it out from underneath the retainer. Observe the battery polarity when replacing. Once the battery is replaced, **YOU NEED TO REPROGRAM THE KEYCHAIN TO THE BASE UNIT**